

***JP Adjustable Gas System:
.750 bore aluminum, stainless steel
and minimized steel models***

Parts Included:

- Small bore gas block
- Three (3) 10-32 x 1/4" stainless set screws*
- One (1) 10-32 x 5/16" dog point set screw
- One (1) 8-32 x 3/8" stainless set screw
- 5/64 hex key
- 5/64" x 1/2" roll pin

* The JPGS-5 includes only two screws

Installation Instructions

CAUTION: REMOVE MAGAZINE AND VISUALLY CHECK CHAMBER TO VERIFY THAT WEAPON IS CLEAR.

In order to install the JP Gas Block, it will first be necessary to remove the existing flash suppressor or muzzle brake and the existing front sight/gas system. It will also be necessary to have a very solidly mounted vice, a wrench for the flash suppressor or muzzle brake and a drift to remove the front sight pins. If you do not have vice pads, you may use a heavy rag to prevent damage to the barrel.

First, remove the takedown pins and separate the lower and upper assemblies to make the job easier. Securely lock the section of barrel between the front sight and muzzle in your vice, and then remove the flash suppressor or muzzle brake. It may even be necessary to apply heat with a propane torch to the flash suppressor if it is too secure. Next, remove the front sight retainer pins with a hammer and drift. Note that the pins are tapered and can only be removed by pushing them left to right (right being the ejection port side of the gun.) If your rifle is a factory Colt, these pins can be very difficult to remove and may require the barrel to be held in an extremely solid vice. If the vice tends to move with your bench or your vice pads are too soft, you will not be able to drift these pins out. It also helps to have a short tapered drift to get them started without damaging the sight.

Once the pins have been removed, tap the sight on the rear with a plastic mallet to get it started and remove the sight/gas tube assembly. With a 1/16" drift, remove the gas tube roll pin and gas tube. Reinstall these in the JP Gas Block using the new spring pin included with the kit. Remove the gas adjustment set screw and insert your gas tube into the JP Gas Block. Make sure that the gas port in the gas tube is aligned with the gas port in the block, and using a 5/64" drill bit or a suitable pin, hold the tube in alignment while you drive in the new spring pin. One side of the gas block has the pinhole enlarged slightly to facilitate starting the pin. Finally, it may be necessary to run a 8-32 bottoming tap into the gas adjusting screw hole before installing the set screw, as the screw abuts the bottom of the gas tube.

Before trying to install the JP Gas Block, check to see if there are any burrs around the old front sight pinholes in the bottom of the barrel. If this area is flared above the surface, it will make it very difficult or impossible to install the gas block. Take a file and remove any problem areas. The hole in the JP Gas Block is bored to fit to the .750 portion of the barrel and will not tolerate any obstructions. Now, install the JP Gas Block/gas tube assembly and make sure it is square with the upper assembly. Laying the upper on a large flat surface will ensure that the top of the upper and the top of the gas block are parallel. The JP gas block is designed to replace a standard military front sight assembly, and if you have installed a free floating hand guard on a military spec barrel there will be approximately a .025" gap between the back of the gas block and the shoulder on the barrel. This gap is where the forward hand guard retainer would fit if you were using military hand guards. This gap is important because it assures proper gas port to gas block alignment. Testing with compressed air is a good indicator of alignment. With the bolt inserted and closed, push the air nozzle up to the muzzle and apply air while moving the gas block around until you hear maximum flow. Once alignment is assured and the gas block is level, insert the middle set screw to retain this position or the front screw for the minimized gas block. As an option for added stability, the JP Gas Block also includes a 5/16" dog point set screw to take the place the standard rear set screw. To use this screw, you will need to spot drill a hole in the barrel about .100" deep using a 1/8" drill bit. Once secured, coat the barrel with Loctite 609 (green) and install all the set screws using Loctite 271 (red). Securing the gas block with the dog point set screw will ensure that it will not move even when subject to temperatures hot enough to soften the Loctite. We would also recommend drilling detents for the front two screws.

The aluminum version of the gas block will give fine service on semi-auto rifles with standard barrel length but should not be used for full-auto applications, short-barreled rifles or AR-15/M16 pistols. We offer a steel version for those applications, which will tolerate the high temperature without erosion.

Gas Block Setup

The purpose of our adjustable gas block is to allow you to adjust the bolt velocity, which will result in a smoother shooting rifle especially if you already have a JP Recoil Eliminator. Most rifles cycle faster than necessary, and the resulting "bolt slamming" effect is a noticeable part of the recoil impulse. To adjust for your load, turn the gas adjustment screw in all the way to close it and then, back it out about two full turns. Now load one round in the magazine and fire. If the bolt holds open, the gas block is set. If the bolt did not stay open, it is short stroking and the valve should be opened about another half turn. Continue to back out the screw until the bolt holds open consistently on last round lock back. Test again with one round in the magazine.

Remember, if you change ammo, the rifle may not cycle reliably and should be tested again with any ammunition that you intend to use in actual competition. If you must use untried ammo, back out the valve several turns to ensure full cycling. You may wish to Loctite the valve screw. It is also possible to shut the valve completely if you desire to cycle the rifle manually for any reason.

If your rifle is used for law enforcement or military purposes, we recommend the full open setting so as not to compromise reliability. A new rifle or bolt assembly will have a great deal of friction between the gas rings and carrier and may require a break-in period during which the gas block must be run wide open for complete cycling. As the path through our gas block is a bit longer than a standard front sight manifold, it is a bit less efficient to start with, and a new rifle with an extremely stiff bolt may not cycle completely until broken in. It will help to polish the bore of the carrier on a new bolt to reduce friction and mate the parts.

The JPGS-1 and JPGS-2 series gas blocks feature a Picatinny rail quick-detach point for any accessory you may wish to use on that point such as flash lights, lasers or electronic sights. We offer a quick-detach, height-adjustable front sight featuring a 7/8" globe with 16 interchangeable inserts that is compatible with the original handle sight as well as many other quick-detach rear sights on the market. Call us with any questions you may have.

THANKS FOR YOUR BUSINESS!

Visit us at www.jprifles.com

Rev. 10.06

P.O. Box 378, HUGO, MN 55038 • VOICE: 651-426-9196 • FAX: 651-426-2472