




JP 1911 Control Lever Slide Stop

Installation Instructions

CAUTION: REMOVE MAGAZINE AND VISUALLY CHECK CHAMBER TO MAKE SURE THAT FIREARM IS UNLOADED.

The 1911 control lever slide stop will be a drop-in part on most single-stack 1911s and Caspian wide body frames. However, on STI and SV hi-cap frames, the part must be relieved to clear the frame on the bottom of the shelf feature at the rear as shown in the "Bottom view" below. Also, on most SV/STI pistols, the inside face of the slide stop retention feature my bind in the inside of the slide rail and must be moved back a few thousandths for friction-free clearance as shown in the "Top view." A Dremel tool with a cut-off wheel will work well for both operations if carefully used. Use a steel-blackening chemical to touch up the bare steel areas. A piece of skateboard tape will give a non-slip surface to the shelf feature if necessary.

THANKS FOR YOUR BUSINESS!

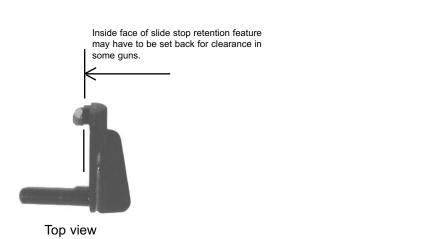



Relieve for SV/STI frames

Bottom view